

# Recording to MicroSD

Bring your own and record directly to MicroSD card. RØDE recommends the use of a high-quality microSD card that supports data rates of at least 100MB/s. Most quality microSD cards labelled '**microSDHC**', and all cards labelled '**microSDXC**' will work well. Cards without these standards or low-quality unbranded cards are not recommended and may cause glitches or other recording issues.

1. Power on the RØDECaster Pro II unit by pressing the red power button on rear of unit
2. Insert MicroSD into the slot on back near red power button. Follow any prompts to format your card.
3. Adjust microphone level for any person using the fader that matches microphone color.
4. Adjust headphone volume for any person using the volume knob that matches the microphone color.
5. Record to MicroSD card by pressing the REC button on the RØDECaster unit.

The REC button lights up in various colors to indicate status:

- Blue - No MicroSD card inserted/can't record. Check or insert card
  - Green - MicroSD card present/ready to press and begin recording
  - Red - Recording is occurring. Display shows elapsed recording time. Can press once to pause or press and hold to stop recording
  - Yellow - Recording is paused. Press once to record again or press and hold to stop recording
6. Stop recording
  7. When recording is completed, power off the RØDECaster Pro II unit and remove MicroSD card